

Installation Instructions

ADL

ADL 2012 | ADL 3018 | ADL 4024



Please read these instructions carefully before installing or using this appliance for the first time.

ELNUR powered by
Gabarrón

1. WARNING

- Please read these instructions before installing or using this appliance for the first time. The warranty of the storage heater will not cover any damage caused by non-observance of any of these instructions.
- This Guide must be kept and given to any new owner for future references.
- Nothing may be placed within 30cms of the front of the heater at any time. This is to avoid items coming into contact with the grille and the head air which leaves, it. Blocking some or all of this area could represent a fire hazard. Never use this heater to dry clothes.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children must not play with the appliance. Cleaning and user maintenance must not be undertaken by children without supervision.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Children of less than 3 years should be kept away unless continuously supervised. Please check that the voltage in the rating label fits the power supply.
- Should the heater be moved and reinstalled it is essential that the work is carried out by a fully qualified engineer. Before carrying out any work inside the appliance, the heater must be disconnected from the electricity supply.
- If during any installation the thermal insulation shows any sign of damage, it is necessary for the faulty part to be removed and replaced by an identical part.
- The use of storage heaters is forbidden in any area where there is a presence of gases, explosives or inflammable objects.
- The air inlet and outlet grills are provided to ensure the most efficient operation of the appliance. They also protect the heater from overheating; therefore, it is essential that at no time are they covered.
- Surfaces of this appliance could be hot. Children should be supervised to ensure they do not play with the heater.
- This heater should be switched off at the isolating switch before any repair work is carried out. This action should also be taken during the times of the year when heat is not required.
- The installation of the heaters must be carried out in such a way that each pole can be disconnected from the supply having a contact separation of at least 3 mm.
- The storage heater should not be installed just below an electrical socket.
- Ensure that both wall supply switches next to the heater are turned on. During the summer when no heat is required, both wall switches can be turned off. Remember to turn both back when the heat is required again.
- The appliance must be installed in such a way that it is impossible for anyone using a bath or shower, to touch the controls. Never touch the heater with wet hands.
- The nominal charging time of this storage heater is indicated on its rating plate and must be controlled by means of a programmer. Never open a charged heater.
- The installation must be carried out in accordance with the current electrical regulations. Check the voltage on the rating label is the same as the supply.
- This appliance must be earthed.
- After installation a survey of the first charging cycle should be carried out to ensure that the main input thermostat switches off. Ventilate the room during this first cycle.
- The fan may run at any time. This will happen automatically to maintain the temperature that you have programmed into the control system.
- To maintain stability, it is essential that the heater is placed on a level surface and care should be taken to avoid irregular surfaces, such as carpets or tiled surrounds partially protruding under the heater.
- The presence in the air of particles of smoke, dust and other pollutants could, in time, discolour the walls and surfaces around the heater.



CAUTION: Some parts of this product can become very hot and cause burns. Particular attention must be given when children and vulnerable people are present.



WARNING: In order to avoid overheating do not cover the heater.

2. INTRODUCTION

Storage heaters are designed to take advantage of an off-peak tariff.

The heaters consume electricity only during the off-peak tariff, but due to the highly efficient storage medium, give you a truly economical 24 hours of comfort temperatures.

The input control operates a highly sensitive thermostat which regulates the amount of heat stored.

The discharge takes place when the built-in fan operates. The fan drives fresh air through the core and is heated. A bimetallic device mixes the hot air with fresh air to provide homogeneous temperature.

It is important that the correct rating of heater is installed to provide the selected level of heat. This will ensure the best possible running costs against other fuels.

To avoid transport problems, the heater casings and storage bricks are packed separately. Bricks with some slight defects in the corners can be used.


You should be aware that storage heaters, when fully charged, can have high surface temperatures.

3. INSTALLATION INSTRUCTIONS

Installing the controlled storage fan heater:

1. Choose the right place to install the heater, considering the minimum distances between heater and other objects. A minimum distance of 50cm is required for a good heat delivery.
2. Open the box by the side indicated, and remove the box containing the accessories, electrical elements and parts to fix to the wall. Turn the box upside down so the heater stands up on its feet and remove the shipping carton. Check if it is the requested model and it is in brand new condition.
3. Screw on the wall the fixing part, making drills at 61 cm above the floor (Fig. 1).

This prevents the heater overturning. The function of the device is not to hang the heater. If there is any doubt as to the strength of the wall, please consult an expert. Storage heaters are very heavy and the installer must ensure that they are securely fixed and there is no possibility of them overturning.

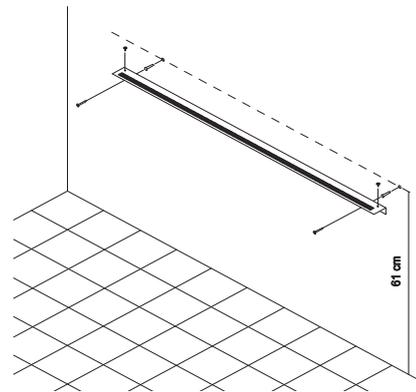


4. Remove the front outlet grill by removing the four screws. Also remove the front panel by removing the two screws at the bottom of the heater.
5. Attach the LH & RH spacers to the storage heater using the screws supplied, in the same way as the screws are fixed in the upper rear section of the heater side. Check the heater is separated 25mm from the wall at the top and bottom of the heater (Fig. 2). Fit and screw the appliance to the anti-tilt device.
6. Remove the inner front panel.






WARNING: At the other side of this part there is a breakable panel of thermal isolation. It must be handled with care. Avoid touching it.

- Place a row of storage bricks carefully, with the flat side facing the bottom of the heater. Insert one of the heating elements in the holes in the right side insulation (Fig. 3).

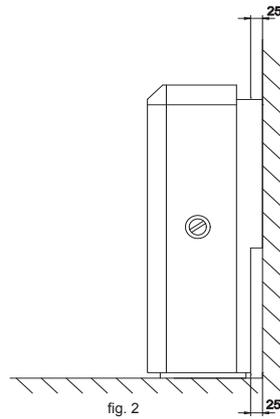

- Check that the heating element rests completely on the bricks without restricting a new row (Fig. 4).
- Arrange two new rows of bricks, ensuring the flat side of each bricks is facing towards the bottom of the heater, and insert a new heating element. Repeat the operation for the third heating element. Place the last row of bricks also with the flat side toward the bottom of the heater. Check there is no gap between bricks.
- Connect the heater following the enclosed diagram. Ensure all connections are correct and that no connection is damaged. Do not leave any remaining wire inside the heater.
- Refit the inner front panel. If the bricks have been fitted correctly you will find no difficulty during this action.

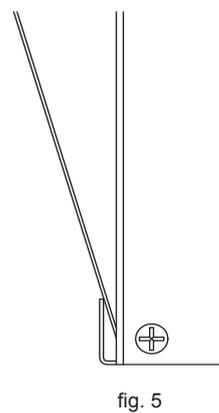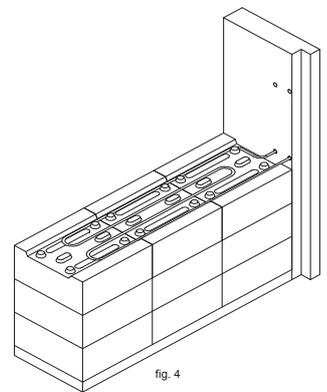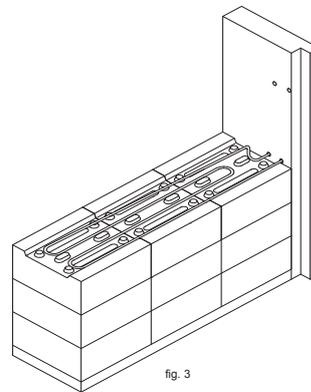

12. Attach the front panel by hanging it on the "V" in the upper part and securing it at the bottom with the two screws.

13. Finally, fit the outlet grill with the four screws.

4. USING THE HEATER

The input control allows you to control the amount of heat stored during the night.

Mild weather it is enough to set the input control at intermediate positions, you can set the input control at maximum position if necessary. In this position the heater stores the maximum energy.

Controlled storage fan heaters deliver their heat from a highly insulated core by means of a silent fan. This fan should be managed by a good ambient thermostat.

During the first cycles some odours are possible; in this case ventilate the room until they disappear.

5. MAINTENANCE OF YOUR STORAGE HEATER

This controlled storage fan heater does not need any special care.

Dust accumulated on the heater surface can be removed using a damp cloth when the controlled storage fan heater is cold. Do not use solvent or abrasive products.

Night storage heaters are manufactured under an assured quality system using environment friendly procedures.

Please take the heaters to a clean point once their useful life is finished, in order to recycle their materials in the right way.


6. TECHNICAL SPECIFICATIONS

Model	ADL 2012	ADL 3018	ADL 4024
Input	2000W	3000W	4000W
Voltage	220-240V-	220-240V-	220-240V-
Max. Charge time	8 h	8 h	8 h
Charge	16 kWh	24 kWh	32 kWh
Weight	123 kg	173 kg	225 kg
Length	63 cm	81 cm	99 cm
Wide	24 cm	24 cm	24 cm
Height	66 cm	66 cm	66 cm
Bricks (7,5 kg)	12	18	24

7. WIRING

Cód. 20290120

- R1, R2, R3 Elements
- Rm Fan resistor
- Tcs Thermostat, control and safety
- Tsd Output safety device
- m Fan
- PE Earth
- L1, L2, L3 Phases (off-peak tariff)
- N Neutral
- LD Live (24h)

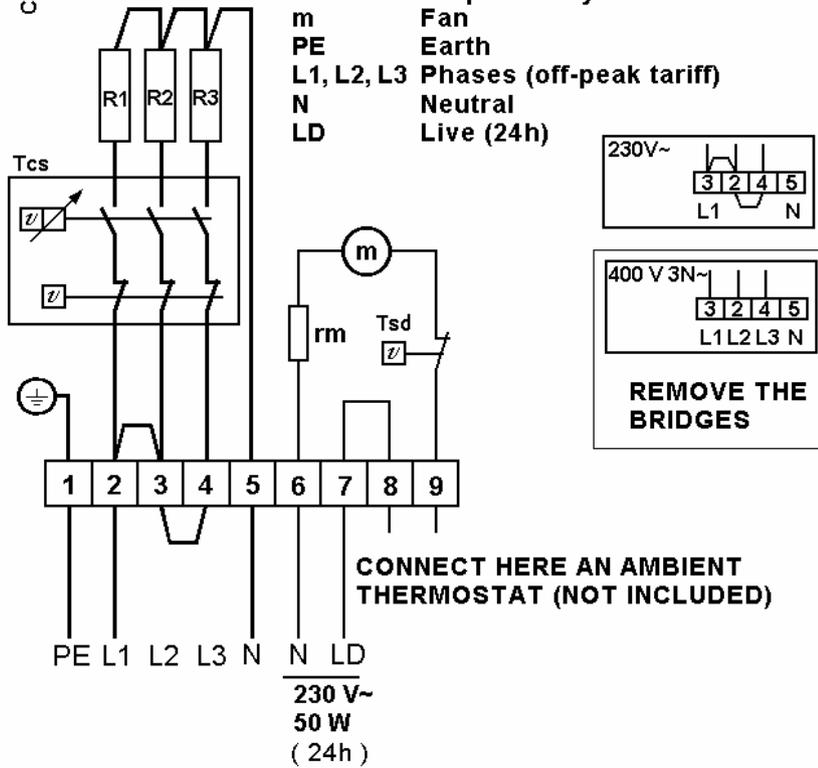



El símbolo en el producto o en su embalaje indica que este producto no se puede tratar como desperdicios normales del hogar. Este producto se debe entregar al punto de recolección de equipos eléctricos y electrónicos para reciclaje. Al asegurarse de que este producto se deseché correctamente usted ayudará a evitar posibles consecuencias negativas para el ambiente y la salud pública, lo cual podría ocurrir si este producto no se manipula de forma adecuada. Para obtener información más detallada sobre el reciclaje de este producto, póngase en contacto con la administración de su ciudad, con su servicio de desechos del hogar o con la tienda donde compró el producto. Estas disposiciones solamente son válidas en los países miembros de la UE.

The symbol on the product or in its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product. These instructions are only valid in the EU member states.

Supplier:

ELNUR UK Ltd.
Unit 1, Brown Street North
Leigh, Lancashire, WN7 1BU.
+44(0)1942 670119
info@elnur.co.uk

Manufactured by:

ELNUR S.A.
Travesía de Villa Esther, 11 28110, Algete
Madrid Telephone: +34 916281440

15190020 R2 | EN

www.elnur.co.uk



© All rights reserved. As part of the continuous improvement policy, ELNUR, S.A. reserves the right to alter or modify any specifications without notice.